
| ZONE |







In-built high-quality microphone

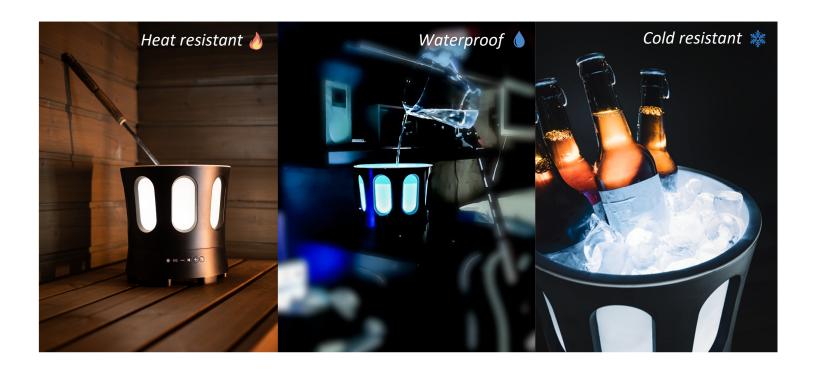


Control your ZONE via phone with Google Now, Alexa and Siri



High-quality, durable materials



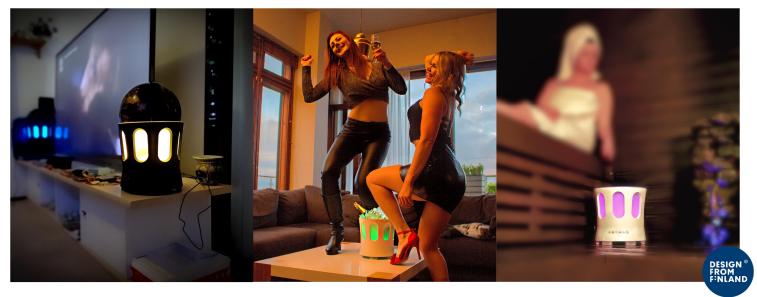

Enhances your decor True Wireless Stereo (TWS) – Soundbar Genuinely multipurpose luxury-quality speaker



ZONE provides a warm and rich soundscape by utilising its environment.

120-degree high and mid-frequencies 360-degree subwoofer 360-degree optimised resonance


The sound system has been designed to use the frame to produce a soundscape with distinct high, low and mid-frequencies. This means that ZONE lets you hear music as it was meant to be heard.

ZONE is designed to give music a new dimension – feel.

| Feel the music |



Patented innovation

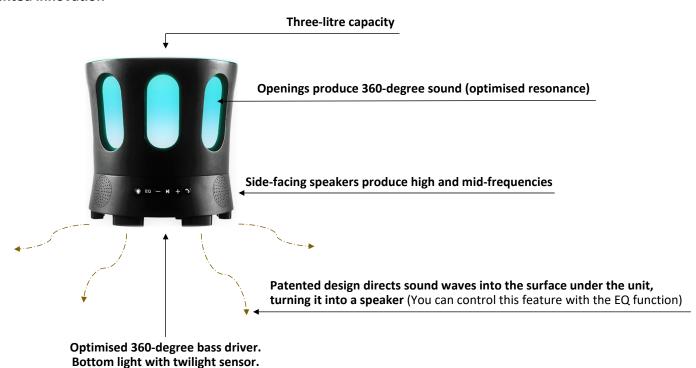

Technical details

2.1 sound system

2 x 10 W + 20 W subwoofer

Connections

Bluetooth 5 (TWS)

AUX USB port

Controllable RGB lighting

Red, Green, Blue, White, Alternating, Music-synchronised,

Off.

Light-level-controlled flashlight function on the bottom.

Equalizer (EQ)

Five different sound modes.



Optimised 360-degree bass driver. Bottom light with twilight sensor.

Environmentally friendly

High-quality certified materials

Portable

Weight: 2.1 kg

Power source

10-hour battery life USB power bank

Phone function

Answer/dismiss

Safety

IPX5 (100% waterproof)

Product information:

Waterproof level: IPX5 (100 % waterproof)

RMS: 2 x 5 W + 1 x 15 W

Max output power: $2 \times 10 \text{ W} + 1 \times 20 \text{ W}$

Output channels: 2.1

Full frequency speakers: Φ 52 mm, 4 Ω , 10 W x 2Subwoofer: Φ 76 mm, 4 Ω , 20 W x 1Frequency: Φ 40 Hz - 20 kHz (-6 dB)

 Distortion:
 ≤1%

 SNR:
 90 dB

Connections:

Bluetooth version: ATS2819 V5.0 (TWS)

Bluetooth protocol: A2DP, AVRCP, HFP, SPP, BAS,

DIS, FMP, HRP, HRS, HTP, HTS, IAS, LLS

AUX port USB port

Power source and charger:

Battery type: Li-On Battery 18650
No. of batteries: 2,500 mAh X 4
Battery capacity: 14.4 V / 2,500 mAh
Power source: 18 V / 1.2 A

USB port: Output power 5 V / 1 A

Dimensions and weight:

Dimensions: 237 mm x 230 mm (H x W)

Weight: 2.1 kg

Safety information

ZONE is extremely safe to use, but please read the safety regulations below carefully before using the device. By doing so, you also ensure the best and longest user experience with your ZONE.

- 1. Do not try to dismantle your ZONE!
 - * Manufacturer can't guarantee ZONE waterproof level if dismantle.
- 2. Do not pour boiling water in the water reservoir of your ZONE!
 - * ZONE shell material will soften over 95 degrees and melt over 120 degrees.
- 3. Do not place your ZONE in a hot environment without cool water in its water reservoir! Water helps to keeps electronic temperature under 60 degrees.
 - * To ensure optimal lifespan, place ZONE on the lower bench and fill the water reservoir with cool water.
 - ** Battery capacity will suffer over 60 decrees.
 - *** DO NOT LEAVE ZONE in the Hot Sauna unnecessary
- 4. Do not place your ZONE in an oven or near an open flame or barbecue grill!
 - * Shell of ZONE is made from high-quality ABS-plastic.
- 5. Do not immerse your ZONE in water!
 - * ZONE contains waterproof loudspeaker elements. Subwoofer speaker coil will burn if element cannot move freely.
- 6. Do not place your ZONE in a freezing environment without the power being on!
 - * ZONE electronics produce littlebit of heat which protects electronics in cold temperatures.
- 7. Be careful not to drop your ZONE!
- 8. Do not detach the rubber protective cover at the back of the device!
 - * ZONE electronics are behind this rubber cover. For the warranty reasons in the electronic circuit board has a water indicator which indicates contact with water.
 - * Please note: Even if the rubber plug comes off, you can still use the device by closing it back. The rubber plug's removal is merely a cosmetic issue.
- ZONE Bluetooth speaker contains built-in safety circuits Overload and Over heating.
- * lease see user manual: https://cdn.shopify.com/s/files/1/0514/1977/5151/files/ZONE User Manual EN FIN SW GR 2024.pdf?v=1732038591

Troubleshooting

FAULT	EXPLANATION	NOTE
The high frequencies are not heard clearly (the sound is muffled)	The side speaker openings are blocked by water. Blow into the speaker openings to remove the water.	Do not insert any sharp objects into the openings, as this could damage the speaker elements.
Connection breaking	Move the paired device closer to your ZONE.	The Bluetooth signal may be weakened by water and the sauna's wall vapor barrier. BT antenna is located on the back of the device. For optimal performance, orient the back of the device towards your phone.
No audio	Check that your ZONE has not been inadvertently muted. Press the + button to increase the volume and make sure your ZONE is not muted.	Also check your audio source volume level.
ZONE cannot connect with the paired device	Check that your device's Bluetooth function is enabled.	ZONE will also be unable to connect with a Bluetooth device if there is a device connected to ZONE via the audio jack (AUX).
ZONE does not power on	Charge your ZONE by connecting it to a power outlet. USE ONLY ZONE Bluetooth speaker own 18V/1,2A charger.	ZONE Bluetooth speaker requires 18v/1,2A charger and it cannot charge with lower power charger!
Sound-quality is low	ZONE is designed to reproduce music as it was intended. Therefore, ZONE speaker does not attempt to correct poor audio quality, as many other speakers do.	If the music is recorded in poor quality (such as many streaming videos), then the sound will also sound worse.
Broken rubber plug	Even if the rubber plug comes off, you can still use the device by closing it back.	The rubber plug's removal is merely a cosmetic issue. ZONE remains waterproof as long as the rubber plug is securely tightened.

Please see user manual: https://cdn.shopify.com/s/files/1/0514/1977/5151/files/ZONE User Manual EN FIN SW GR 2024.pdf?v=1732038591

BRANDING

Product name: ZONE Bluetooth speaker (please see typing) LOGO: As in example

ZONE

ZONE

Font: Abadi Extra Light

Font style: Normal

Character spacing: Extended 16px



| ZONE |



6